

## Split Leg In-Chair Hammock



Integrity Healthcare Ltd  
Unit 47 Vale Business Park  
Llandow Industrial Estate  
Cowbridge  
South Wales  
CF71 7PF  
UK

**T: +44(0)800 043 0050 / T: 01446 612 238**  
**e: [customerservices@integrity-healthcare.co.uk](mailto:customerservices@integrity-healthcare.co.uk)**  
**[www.integritymobilitysolutions.com](http://www.integritymobilitysolutions.com)**

## Split Leg In-Chair Hammock

1

PLEASE NOTE – THIS SLING SHOULD ONLY BE APPLIED AND REMOVED ON A FLAT SURFACE.

Roll the person to one side using a suitable rolling technique.




2

Lie the sling flat with the label facing down on the bed. The bottom edge of the sling should be set slightly lower than the clients knees. Tuck the half which is nearest to the client underneath them.




3

Roll the client to the other side exposing the previously tucked in half of the sling. Pull out the sling and ensure that the sling is flat and even.

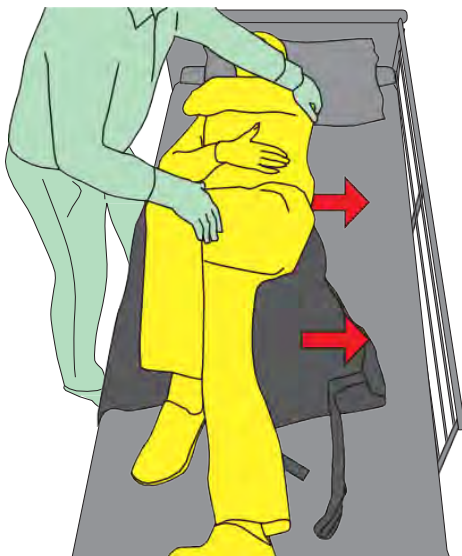

4

Roll the client on to their back and ensure the sling is aligned and centered.

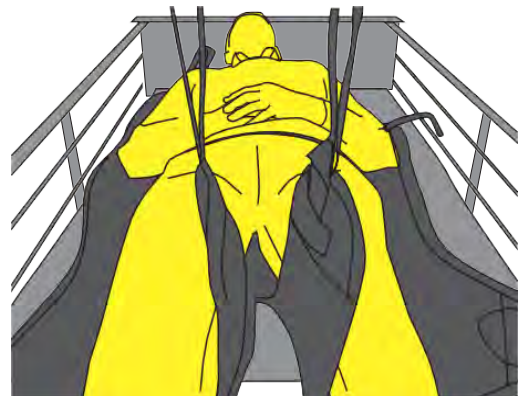

5

Feed the inner right leg strap and feed it through the short dignity loop on the left leg.




6

Feed the long outer leg strap on the left leg through the short inner loop of the left leg and the right leg long strap through the short loop of the right leg. Ensure that the sling is square and aligned evenly. Before attaching the sling to the hoist it is advisable to bring the lying surface in to a seated position if possible.




7

Attach the leg straps to the spreader bar followed by the shoulder straps. At this point it is advisable to hold the bottom edge of the sling to stop it riding up the leg during lifting. Raise the hoist until the straps start to take tension, stop the lift and ensure that all straps are attached correctly before completing the lift.

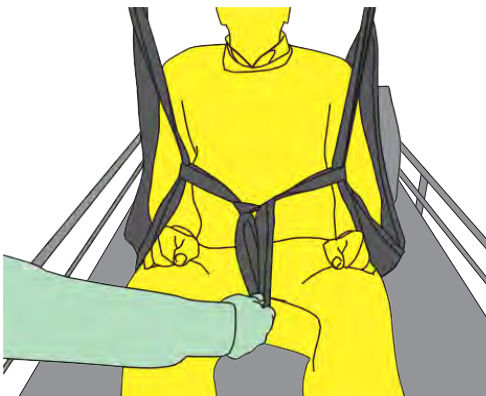

8

The loop selection of each strap should be in accordance to a moving handling plan written by a competent person. Lifting straps can contain differing quantities of loops, the loop closest to the body of the sling will always be identified as number 1.

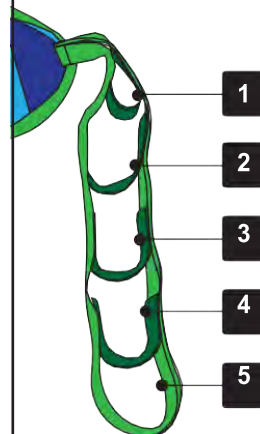

## EXAMINATION AND INSPECTION OF SLING

### CAUTION

Before every lift visually examine the slings structural integrity. If there is any sign of excessive damage to the fabric or straps DO NOT USE THE SLING.

### GENERAL EXTERNAL WEAR

In normal use this is unavoidable and is shown by fluffiness to the surface fibres. This may be caused by sharp edges on straps or hook and loop fastener. This is harmless unless it becomes too extensive. Normal material condition is smooth or flat.

### LOCAL ABRASION IN THE WEBBING STRAPS

This may be caused by the passage of the webbing over the sharp edges whilst under tension or hook and loop fastener. Slight damage to the outer fibres may be considered safe but in severe cases this should lead to instant rejection of the product.

### CUTS, HOLES OR BURNS

These are dangerous and must lead to instant rejection of the product.

### EXAMINATION OF STITCH PATTERNS

Examine the stitch patterns for broken, worn, pulled or unravelled stitches. Reject any product where the thread has become subject to excessive abrasion or broken stitches.



DO NOT USE



DO NOT USE

### WASHING INSTRUCTIONS

Each sling can be laundered up to 80°C using a mild soap solution and then rinse. Slings will air dry quickly in a warm room or in the normal manner.

Tumble dry on low setting only. Do not place over a convactor heater or steam pipes. Do not use Biological detergents. Do not use Bleach. Do not use strong chemicals. A faded label is an early indicator that sling is subject to harsh /abrasive cleaning methods do not continue to use sling. All slings fitted with a hook and loop fastener body belt should have the hook and loop fastener square removed during laundering and refitted afterwards. This will significantly extend the lifespan of the product.

### SAFE WORKING LOAD

Spacer - 300kg | Poly - 400kg

### SLING INSPECTION

Each product should be inspected prior to each use and with your six month or annual hoist inspection. This is in line with LOLER (Lifting Operations and Lifting Equipment Regulations)



Integrity Healthcare Ltd, Unit 47, Vale Business Park, Llandow Industrial Estate, Cowbridge, South Wales, CF71 7PF, UK  
t: +44(0)800 043 0050 | t: 01446 612 238 | e: customerservices@integrity-healthcare.co.uk | www.integritymobilitysolutions.com



## In-Chair Hammock



Integrity Healthcare Ltd  
Unit 47 Vale Business Park  
Llandow Industrial Estate  
Cowbridge  
South Wales  
CF71 7PF  
UK

**T: +44(0)800 043 0050 / T: 01446 612 238**

**e: [customerservices@integrity-healthcare.co.uk](mailto:customerservices@integrity-healthcare.co.uk)**


**[www.integrity-healthcare.co.uk](http://www.integrity-healthcare.co.uk)**



## In-Chair Hammock

### 1 PLEASE NOTE - THIS SLING SHOULD ONLY BE APPLIED AND REMOVED ON A FLAT LYING SURFACE.


Roll the client to one side using a suitable rolling technique.

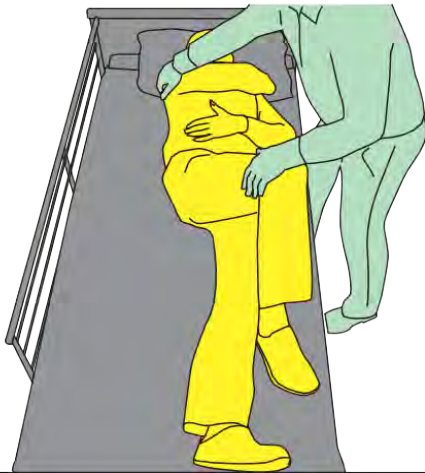


2 Lie the sling flat with the label facing down on the bed. The bottom edge of the sling should be in line with the client's knees and the top should be in line with the base of the neck. Tuck the half which is nearest to the client underneath them. The bottom edge of the sling should be set 2 inches below the knee as a starting point




3 Roll the client to the other side exposing the previously tucked in half of the sling. Pull out the sling and ensure that the sling is flat

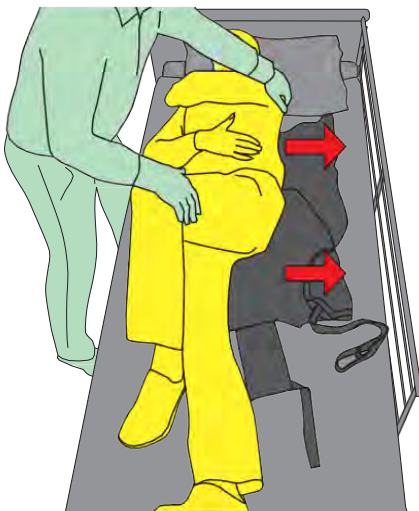


4 Roll the client on to their back and ensure the sling is aligned and centred. Before attaching the sling to the hoist it is advisable to bring the lying surface in to a seated position if possible.

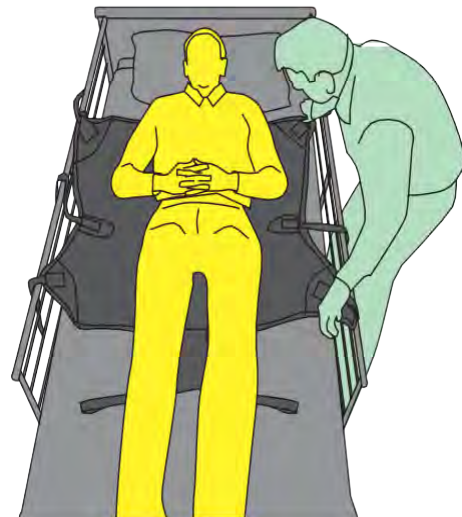


- 5** Feed the long outer right leg strap and feed it through the short right loop on the pommel. Repeat this procedure on the left side.

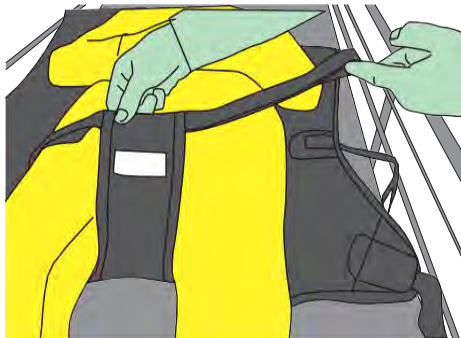


- 6** Ensure that the sling is square and aligned correctly. Before attaching the sling to the hoist it is advisable to bring the lying surface in to a seated position if possible.

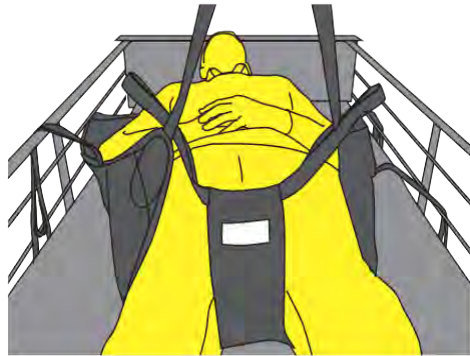

- 7** Attach the leg straps to the spreader bar followed by the shoulder straps. When starting the lift hold the slings bottom edge to prevent the sling from riding up.

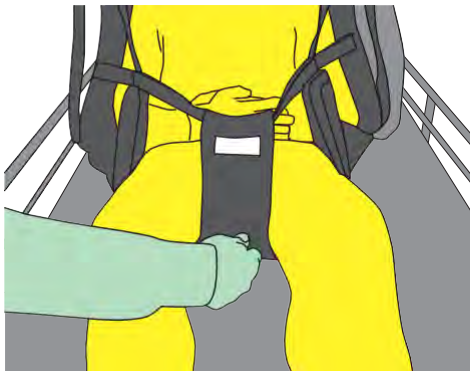

- 8** The loop selection of each strap should be in accordance to a moving handling plan written by a competent person. Lifting straps can contain differing quantities of loops, the loop closest to the body of the sling will always be identified as number 1.

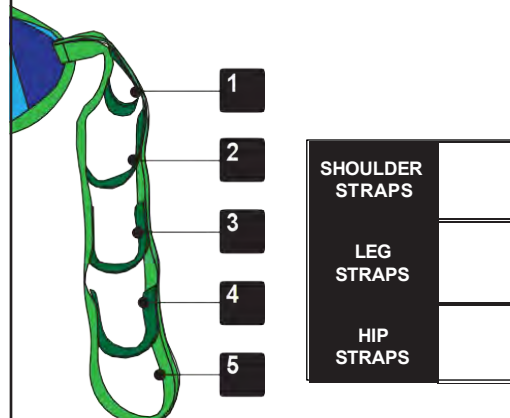

## EXAMINATION AND INSPECTION OF SLING

### CAUTION

Before every lift visually examine the slings structural integrity. If there is any sign of excessive damage to the fabric or straps DO NOT USE THE SLING.

### GENERAL EXTERNAL WEAR

In normal use this is unavoidable and is shown by fluffiness to the surface fibres. This may be caused by sharp edges on straps or hook and loop fastener. This is harmless unless it becomes too extensive. Normal material condition is smooth or flat.

### LOCAL ABRASION IN THE WEBBING STRAPS

This may be caused by the passage of the webbing over the sharp edges whilst under tension or hook and loop fastener. Slight damage to the outer fibres may be considered safe but in severe cases this should lead to instant rejection of the product.

### CUTS, HOLES OR BURNS

These are dangerous and must lead to instant rejection of the product.

### EXAMINATION OF STITCH PATTERNS

Examine the stitch patterns for broken, worn, pulled or unravelled stitches. Reject any product where the thread has become subject to excessive abrasion or broken stitches.



DO NOT USE



DO NOT USE

### WASHING INSTRUCTIONS

Each sling can be laundered up to 80°C using a mild soap solution and then rinse. Slings will air dry quickly in a warm room or in the normal manner.

Tumble dry on low setting only. Do not place over a convactor heater or steam pipes. Do not use Biological detergents. Do not use Bleach. Do not use strong chemicals. A faded label is an early indicator that sling is subject to harsh /abrasive cleaning methods do not continue to use sling. All slings fitted with a hook and loop fastener body belt should have the hook and loop fastener square removed during laundering and refitted afterwards. This will significantly extend the lifespan of the product.

### SAFE WORKING LOAD

Spacer - 300kg | Poly - 400kg

### SLING INSPECTION

Each product should be inspected prior to each use and with your six month or annual hoist inspection. This is in line with LOLER (Lifting Operations and Lifting Equipment Regulations)



Integrity Healthcare Ltd, Unit 47, Vale Business Park, Llandow Industrial Estate, Cowbridge, South Wales, CF71 7PF, UK  
t: 01446 612 238 | t: 0800 043 0050 | e: customerservices@integrity-healthcare.co.uk | www.integritymobilitysolutions.com







## Stand Aid Sling



Integrity Healthcare Ltd  
Unit 47 Vale Business Park  
Llandow Industrial Estate  
Cowbridge  
South Wales  
CF71 7PF  
UK

**T: +44(0)800 043 0050 / T: 01446 612 238**


**e: [customerservices@integrity-healthcare.co.uk](mailto:customerservices@integrity-healthcare.co.uk)**

**[www.integrity-healthcare.co.uk](http://www.integrity-healthcare.co.uk)**


## Stand Aid Sling

### 1 PLEASE NOTE - BEFORE FITTING REMOVE THE SQUARE HOOK PATCH ON THE BODY BELT.


Ensure that the guiding handles and identification label are on the outside.

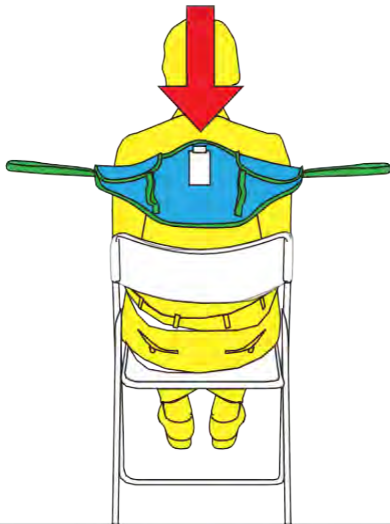


### 2 Place the sling down the back of the client using the rear pocket. Ensure the aperture is above the waist line.

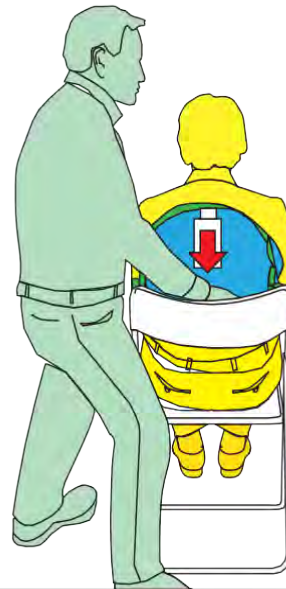


### 3 Pull the body belt into position and reapply the hook square patch to belt.

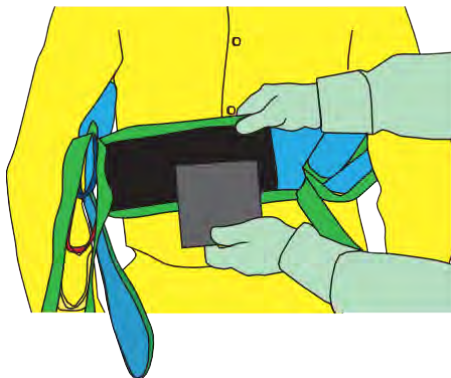


### 4 Close belt firmly ensuring a comfortable fit. This does not need to be over tight. Check the sling is equal and square

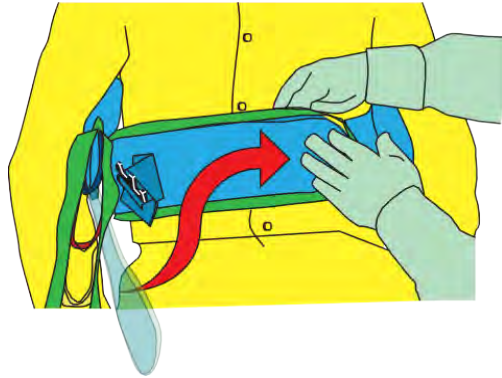


- 5** The additional belt with buckle can be closed. This belt can be adjusted by pulling the end of the strap.

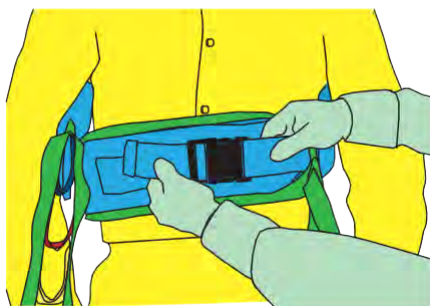


- 6** Attach the shoulder straps.

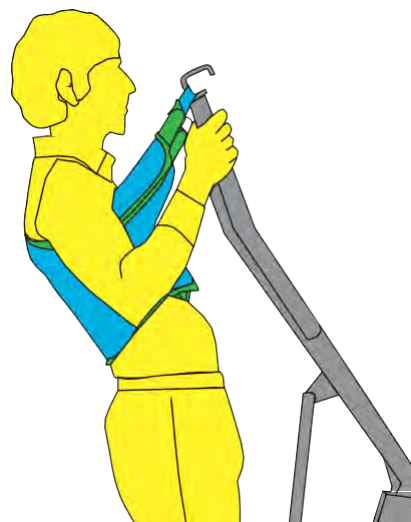

- 7** The loop selection of each strap should be in accordance to a moving handling plan written by a competent person. Lifting straps can contain differing quantities of loops, the loop closest to the body of the sling will always be identified as number 1.

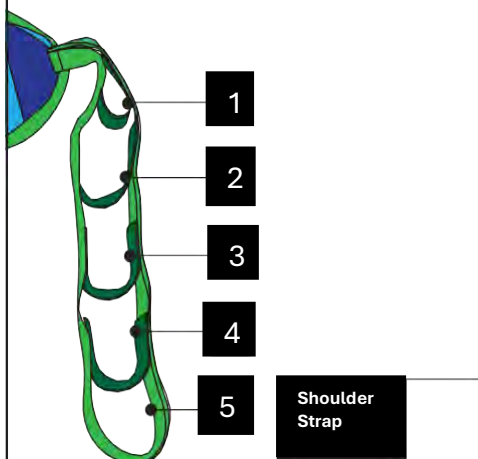

- 8** Carry out the transfer ensuring that the hoist is not drag lifting the client. To reduce this risk ensure that the client leans back into the sling.

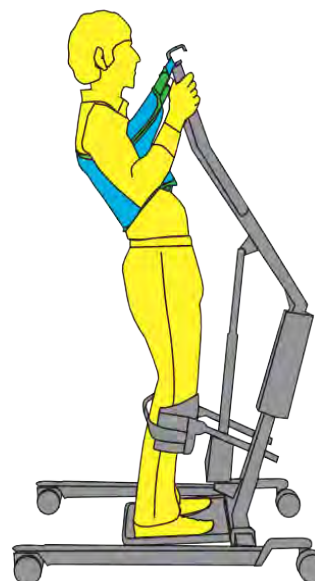

## EXAMINATION AND INSPECTION OF SLING

### CAUTION

Before every lift visually examine the slings structural integrity. If there is any sign of excessive damage to the fabric or straps DO NOT USE THE SLING.

### GENERAL EXTERNAL WEAR

In normal use this is unavoidable and is shown by fluffiness to the surface fibres. This may be caused by sharp edges on straps or hook and loop fastener. This is harmless unless it becomes too extensive. Normal material condition is smooth or flat.

### LOCAL ABRASION IN THE WEBBING STRAPS

This may be caused by the passage of the webbing over the sharp edges whilst under tension or hook and loop fastener. Slight damage to the outer fibres may be considered safe but in severe cases this should lead to instant rejection of the product.

### CUTS, HOLES OR BURNS

These are dangerous and must lead to instant rejection of the product.

### EXAMINATION OF STITCH PATTERNS

Examine the stitch patterns for broken, worn, pulled or unravelled stitches. Reject any product where the thread has become subject to excessive abrasion or broken stitches.



DO NOT USE



DO NOT USE

### WASHING INSTRUCTIONS

Each sling can be laundered up to 80°C using a mild soap solution and then rinse. Slings will air dry quickly in a warm room or in the normal manner.

Tumble dry on low setting only. Do not place over a convactor heater or steam pipes. Do not use Biological detergents. Do not use Bleach. Do not use strong chemicals. A faded label is an early indicator that sling is subject to harsh /abrasive cleaning methods do not continue to use sling. All slings fitted with a hook and loop fastener body belt should have the hook and loop fastener square removed during laundering and refitted afterwards. This will significantly extend the lifespan of the product.

### SAFE WORKING LOAD

Spacer - 300kg | Poly - 400kg

### SLING INSPECTION

Each product should be inspected prior to each use and with your six month or annual hoist inspection. This is in line with LOLER (Lifting Operations and Lifting Equipment Regulations)



Integrity Healthcare Ltd, Unit 47, Vale Business Park, Llandow Industrial Estate, Cowbridge, South Wales, CF71 7PF, UK  
t: 01446 612 238 | t: 0800 043 0050 | e: [customerservices@integrity-healthcare.co.uk](mailto:customerservices@integrity-healthcare.co.uk) | [www.integritymobilitysolutions.com](http://www.integritymobilitysolutions.com)



## Toilet / Access Sling



Integrity Healthcare Ltd  
Unit 47 Vale Business Park  
Llandow Industrial Estate  
Cowbridge  
South Wales  
CF71 7PF  
UK

**T: +44(0)800 043 0050 / T: 01446 612 238**


**e: [customerservices@integrity-healthcare.co.uk](mailto:customerservices@integrity-healthcare.co.uk)**

**[www.integrity-healthcare.co.uk](http://www.integrity-healthcare.co.uk)**




## Toilet / Access Sling


- 1** Before fitting remove the square hook patch on

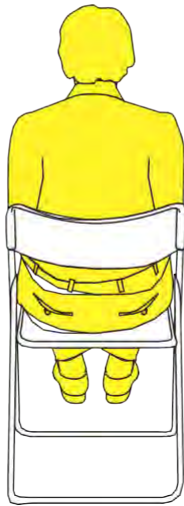


- 2** Ensure that the guiding handles and

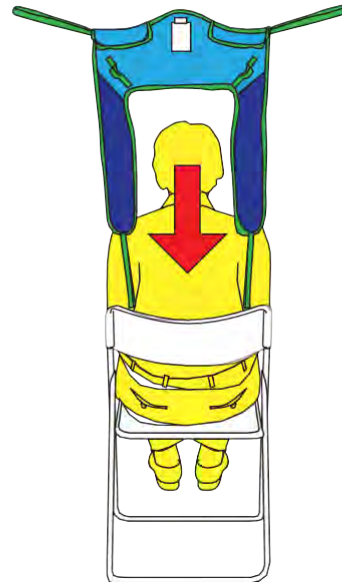

- 3** The Sling should be centred and aligned with the user's back. The aperture should sit above the waist line and the padded rolls are underneath the arms.

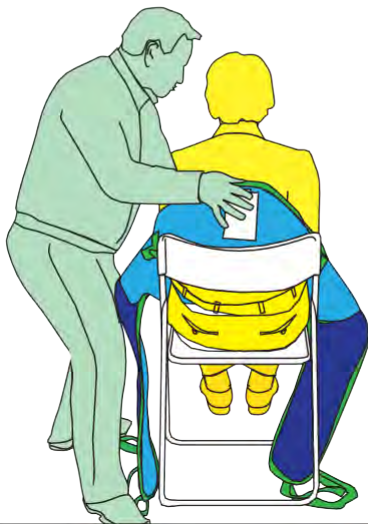


- 4** Place the body belt around the user's torso and replace the **hook and loop fastener** patch to the belt

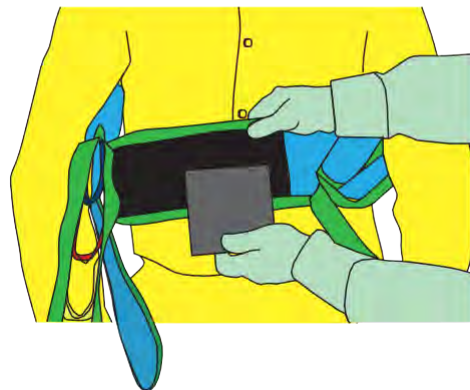

5


Close belt firmly ensuring a comfortable fit.

This does not need to be over tight. Check the sling is equal and square with equal amounts of material under the arms.

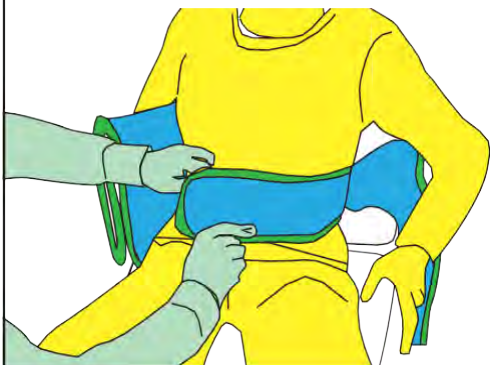


6

Carefully feed the legs of the sling underneath pushing the sling section down into the seating surface to avoid friction and shear against the clients legs.

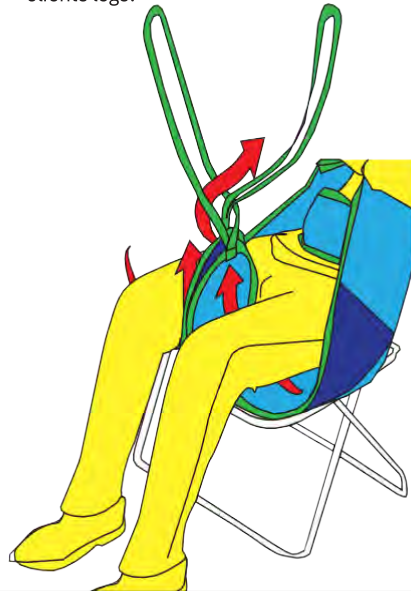


7

The loop selection of each strap should be in accordance to a moving handling plan written by a competent person. Lifting straps can contain differing quantities of loops, the loop closest to the body of the sling will always be identified as number 1.

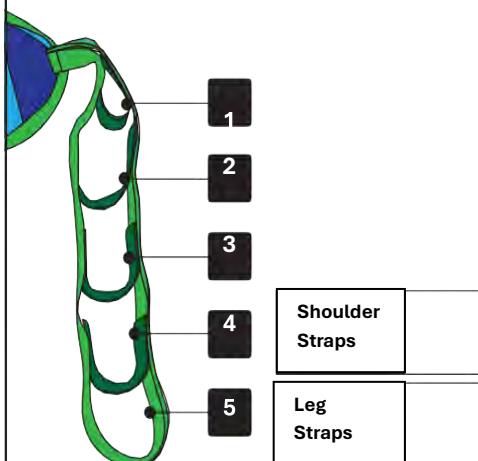

8

Attach straps to the spreader bar.

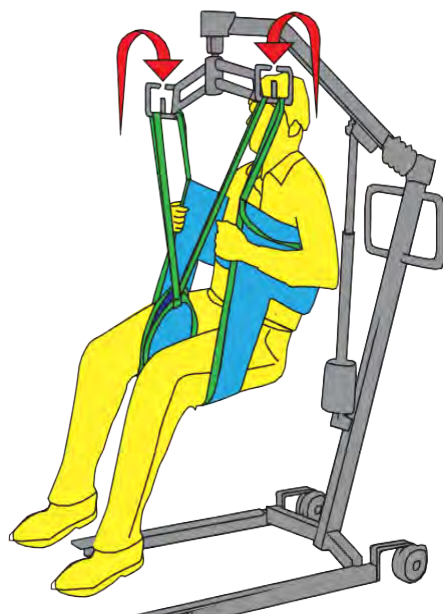

## EXAMINATION AND INSPECTION OF SLING

### CAUTION

Before every lift visually examine the slings structural integrity. If there is any sign of excessive damage to the fabric or straps DO NOT USE THE SLING.

### GENERAL EXTERNAL WEAR

In normal use this is unavoidable and is shown by fluffiness to the surface fibres. This may be caused by sharp edges on straps or hook and loop fastener. This is harmless unless it becomes too extensive. Normal material condition is smooth or flat.

### LOCAL ABRASION IN THE WEBBING STRAPS

This may be caused by the passage of the webbing over the sharp edges whilst under tension or hook and loop fastener. Slight damage to the outer fibres may be considered safe but in severe cases this should lead to instant rejection of the product.

### CUTS, HOLES OR BURNS

These are dangerous and must lead to instant rejection of the product.

### EXAMINATION OF STITCH PATTERNS

Examine the stitch patterns for broken, worn, pulled or unravelled stitches. Reject any product where the thread has become subject to excessive abrasion or broken stitches.



DO NOT USE



DO NOT USE

### WASHING INSTRUCTIONS

Each sling can be laundered up to 80°C using a mild soap solution and then rinse. Slings will air dry quickly in a warm room or in the normal manner.

Tumble dry on low setting only. Do not place over a convactor heater or steam pipes. Do not use Biological detergents. Do not use Bleach. Do not use strong chemicals. A faded label is an early indicator that sling is subject to harsh /abrasive cleaning methods do not continue to use sling. All slings fitted with a hook and loop fastener body belt should have the hook and loop fastener square removed during laundering and refitted afterwards. This will significantly extend the lifespan of the product.

### SAFE WORKING LOAD

Spacer - 300kg | Poly - 400kg

### SLING INSPECTION

Each product should be inspected prior to each use and with your six month or annual hoist inspection. This is in line with LOLER (Lifting Operations and Lifting Equipment Regulations)



Integrity Healthcare Ltd, Unit 47, Vale Business Park, Llandow Industrial Estate, Cowbridge, South Wales, CF71 7PF, UK  
t: 01446 612 238 | t: 0800 043 0050 | e: [customerservices@integrity-healthcare.co.uk](mailto:customerservices@integrity-healthcare.co.uk) | [www.integritymobilitysolutions.com](http://www.integritymobilitysolutions.com)



## Universal Deluxe Sling



Integrity Healthcare Ltd  
Unit 47 Vale Business Park  
Llandow Industrial Estate  
Cowbridge  
South Wales  
CF71 7PF  
UK

T: +44(0)800 043 0050 / T: 01446 612 238  
e: [customerservices@integrity-healthcare.co.uk](mailto:customerservices@integrity-healthcare.co.uk)  
[www.integrity-healthcare.co.uk](http://www.integrity-healthcare.co.uk)

## Universal Deluxe Sling


- 1** Ensure that the guiding handles and identification label are on the outside.




- 2** Place the sling down the back of the client using the rear pocket. Ensure the aperture is tucked under the client's coccyx.



- 3** Straighten the leg section and push the side of the aperture underneath the client's hip. Repeat on the opposite side. The long outer leg loops should be pulled so they are positioned mid-thigh.

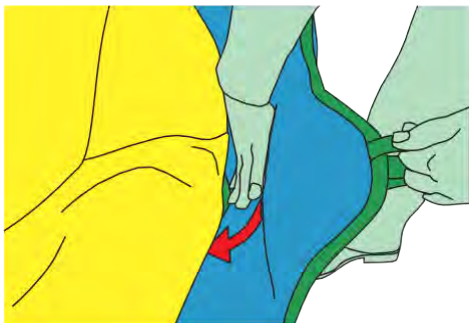


- 4** Carefully feed the leg of the sling underneath pushing the sling section down into the seating surface to avoid friction and shear against the clients legs. Repeat the procedure on the other leg.

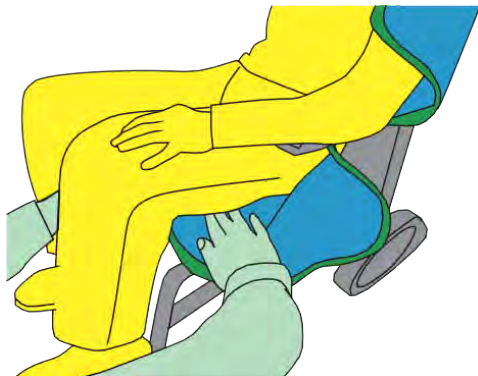




- 5** Ensure that the sling is not twisted or creased under the thighs and check both leg straps are equal in length. Feed the right leg through the loop on the back of the opposite leg.

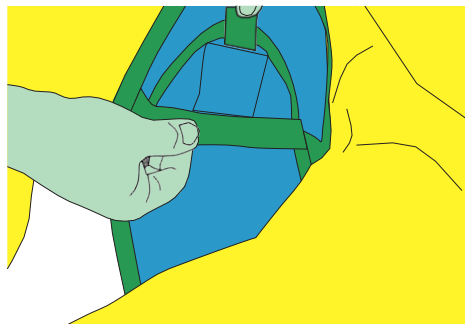


- 6** Feed the short inner leg loop on the left hand leg through the small dignity loop on the right hand leg.

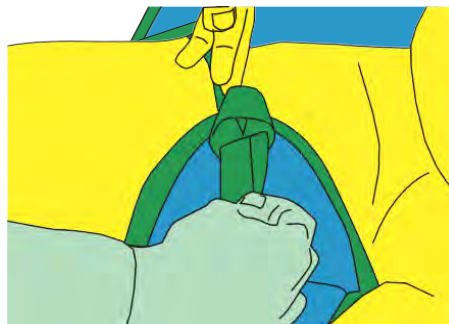

- 7** Feed the long outer leg strap on the left leg through the short inner loop of the left leg and the right leg long strap through the short loop of the right leg.  
Attach the leg straps to the spreader bar then the shoulder straps.



- 8** The loop selection of each strap should be in accordance to a moving handling plan written by a competent person. Lifting straps can contain differing quantities of loops, the loop closest to the body of the sling will always be identified as number 1.

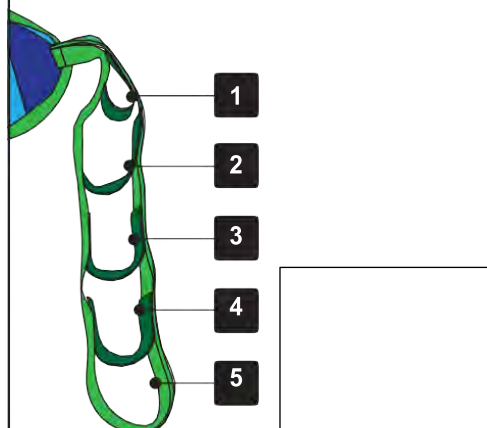

## EXAMINATION AND INSPECTION OF SLING

### CAUTION

Before every lift visually examine the slings structural integrity. If there is any sign of excessive damage to the fabric or straps DO NOT USE THE SLING.

### GENERAL EXTERNAL WEAR

In normal use this is unavoidable and is shown by fluffiness to the surface fibres. This may be caused by sharp edges on straps or hook and loop fastener. This is harmless unless it becomes too extensive. Normal material condition is smooth or flat.

### LOCAL ABRASION IN THE WEBBING STRAPS


This may be caused by the passage of the webbing over the sharp edges whilst under tension or hook and loop fastener. Slight damage to the outer fibres may be considered safe but in severe cases this should lead to instant rejection of the product.

### CUTS, HOLES OR BURNS

These are dangerous and must lead to instant rejection of the product.

### EXAMINATION OF STITCH PATTERNS

Examine the stitch patterns for broken, worn, pulled or unravelled stitches. Reject any product where the thread has become subject to excessive abrasion or broken stitches.

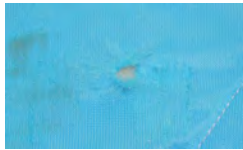

DO NOT USE



DO NOT USE

### WASHING INSTRUCTIONS

Each sling can be laundered up to 80°C using a mild soap solution and then rinse. Slings will air dry quickly in a warm room or in the normal manner.

Tumble dry on low setting only. Do not place over a convactor heater or steam pipes. Do not use Biological detergents. Do not use Bleach. Do not use strong chemicals. A faded label is an early indicator that sling is subject to harsh /abrasive cleaning methods do not continue to use sling. All slings fitted with a hook and loop fastener body belt should have the hook and loop fastener square removed during laundering and refitted afterwards. This will significantly extend the lifespan of the product.

### SAFE WORKING LOAD

Spacer - 300kg | Poly - 400kg

### SLING INSPECTION

Each product should be inspected prior to each use and with your six month or annual hoist inspection. This is in line with LOLER (Lifting Operations and Lifting Equipment Regulations)



Integrity Healthcare Ltd, Unit 47, Vale Business Park, Llandow Industrial Estate, Cowbridge, South Wales, CF71 7PF, UK  
t: 01446 612 238 | t: 0800 043 0050 | e: customerservices@integrity-healthcare.co.uk | www.integritymobilitysolutions.com



## Universal Sling




Integrity Healthcare Ltd  
Unit 47 Vale Business Park  
Llandow Industrial Estate  
Cowbridge  
South Wales  
CF71 7PF  
UK

T: +44(0)800 043 0050 / T: 01446 612 238  
e: [customerservices@integrity-healthcare.co.uk](mailto:customerservices@integrity-healthcare.co.uk)  
[www.integrity-healthcare.co.uk](http://www.integrity-healthcare.co.uk)

## Universal Sling


- 1** Ensure that the guiding handles and identification label are on the outside.

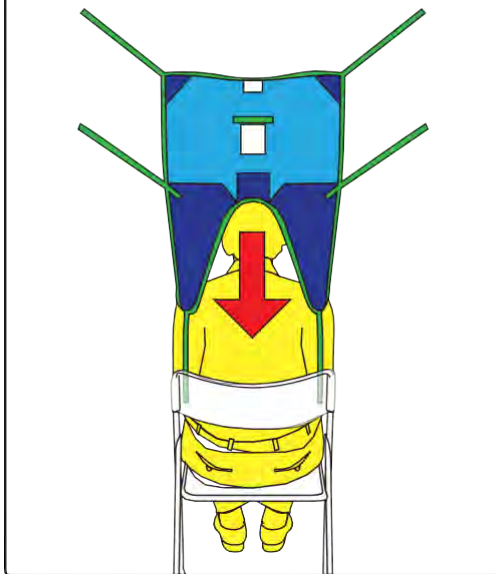


- 2** The Sling should be centered and aligned with the user's back.




- 3** Place the sling down the back of the client using the rear pocket. Ensure the aperture is tucked under the client's coccyx.

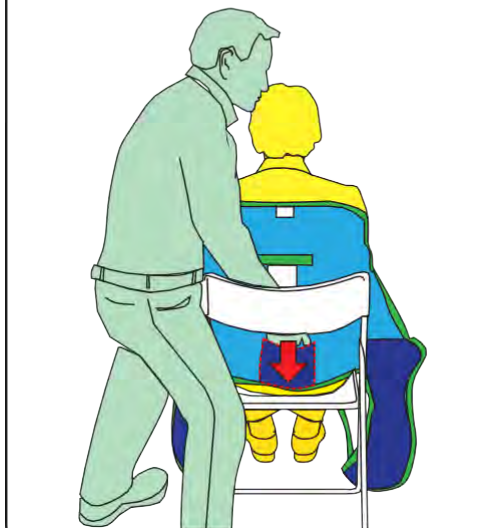


- 4** Straighten the leg section. Push the side of the aperture underneath the client's hip. Repeat on the opposite side. Kneeling in front of the client, pull each leg towards you in turn until all of the slack is taken up.

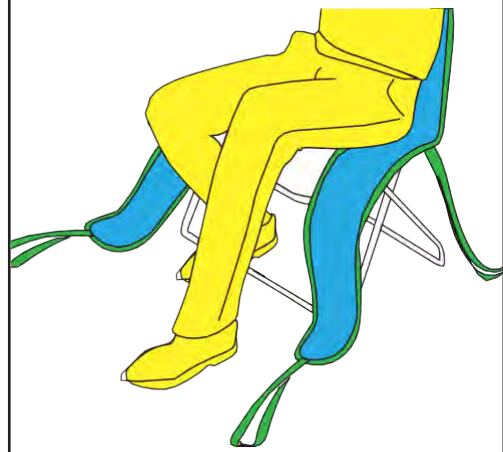


- 5** Carefully feed the legs of the sling underneath pushing the sling section down into the seating surface to avoid friction and shear against the clients legs.

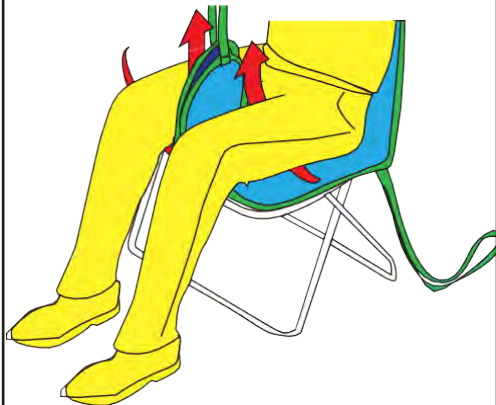


- 6** Ensure the leg sections are equal in length and no twists or kinks are present. Feed one leg strap through the other.

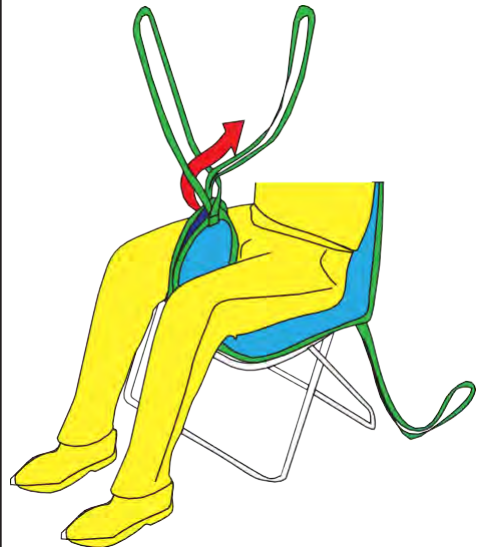

- 7** The loop selection of each strap should be in accordance to a moving handling plan written by a competent person. Lifting straps can contain differing quantities of loops, the loop closest to the body of the sling will always be identified as number 1.

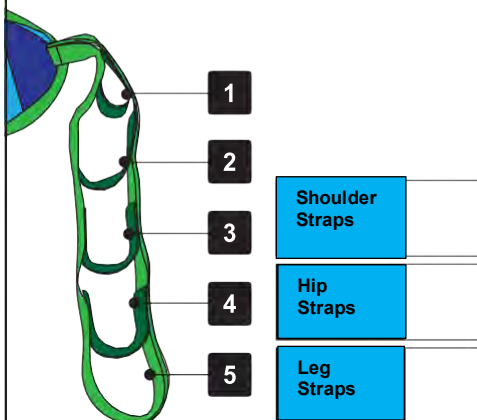

- 8** Attach straps to the spreader bar.

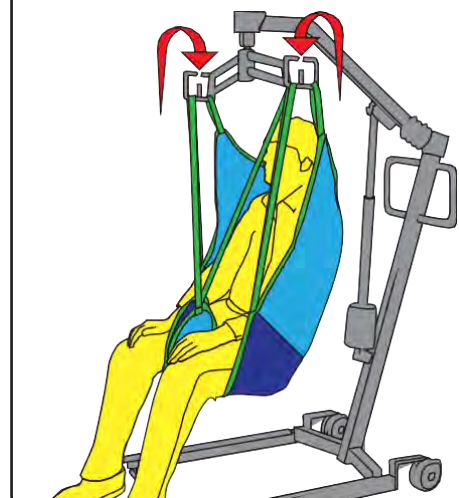



## EXAMINATION AND INSPECTION OF SLING

### CAUTION

Before every lift visually examine the slings structural integrity. If there is any sign of excessive damage to the fabric or straps DO NOT USE THE SLING.

### GENERAL EXTERNAL WEAR

In normal use this is unavoidable and is shown by fluffiness to the surface fibres. This may be caused by sharp edges on straps or hook and loop fastener. This is harmless unless it becomes too extensive. Normal material condition is smooth or flat.

### LOCAL ABRASION IN THE WEBBING STRAPS

This may be caused by the passage of the webbing over the sharp edges whilst under tension or hook and loop fastener. Slight damage to the outer fibres may be considered safe but in severe cases this should lead to instant rejection of the product.

### CUTS, HOLES OR BURNS

These are dangerous and must lead to instant rejection of the product.

### EXAMINATION OF STITCH PATTERNS

Examine the stitch patterns for broken, worn, pulled or unravelled stitches. Reject any product where the thread has become subject to excessive abrasion or broken stitches.



DO NOT USE



DO NOT USE

### WASHING INSTRUCTIONS

Each sling can be laundered up to 80°C using a mild soap solution and then rinse. Slings will air dry quickly in a warm room or in the normal manner.

Tumble dry on low setting only. Do not place over a convactor heater or steam pipes. Do not use Biological detergents. Do not use Bleach. Do not use strong chemicals. A faded label is an early indicator that sling is subject to harsh /abrasive cleaning methods do not continue to use sling. All slings fitted with a hook and loop fastener body belt should have the hook and loop fastener square removed during laundering and refitted afterwards. This will significantly extend the lifespan of the product.

### SAFE WORKING LOAD

Spacer - 300kg | Poly - 400kg

### SLING INSPECTION

Each product should be inspected prior to each use and with your six month or annual hoist inspection. This is in line with LOLER (Lifting Operations and Lifting Equipment Regulations)



Integrity Healthcare Ltd, Unit 47, Vale Business Park, Llandow Industrial Estate, Cowbridge, South Wales, CF71 7PF, UK  
t: 01446 612 238 | t: 0800 043 0050 | e: [customerservices@integrity-healthcare.co.uk](mailto:customerservices@integrity-healthcare.co.uk) | [www.integritymobilitysolutions.com](http://www.integritymobilitysolutions.com)



## Universal with Head Support Sling




Integrity Healthcare Ltd  
Unit 47 Vale Business Park  
Llandow Industrial Estate  
Cowbridge  
South Wales  
CF71 7PF  
UK


**T: +44(0)800 043 0050 / T: 01446 612 238**  
**e: [customerservices@integrity-healthcare.co.uk](mailto:customerservices@integrity-healthcare.co.uk)**  
**[www.integrity-healthcare.co.uk](http://www.integrity-healthcare.co.uk)**

## Universal with Head Support Sling


- 1** Ensure that the guiding handles and identification label are on the outside.

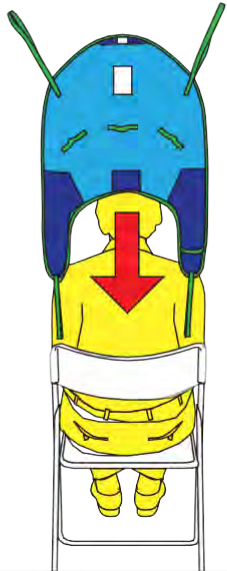


- 2** The Sling should be centered and aligned with the user's back.

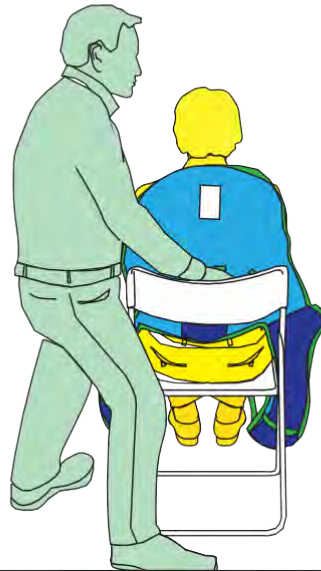


- 3** Place the sling down the back of the client using the rear pocket. Ensure the aperture is tucked under the client's coccyx and that the head will be sufficiently supported.

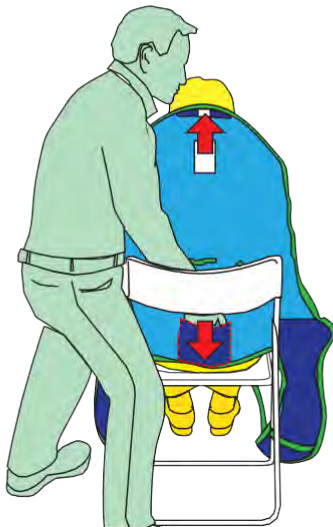


- 4** Straighten the leg section. Push the side of the aperture underneath the client's hip. Repeat on the opposite side. Kneeling in front of the client, pull each leg towards you in turn until all of the slack is taken up.

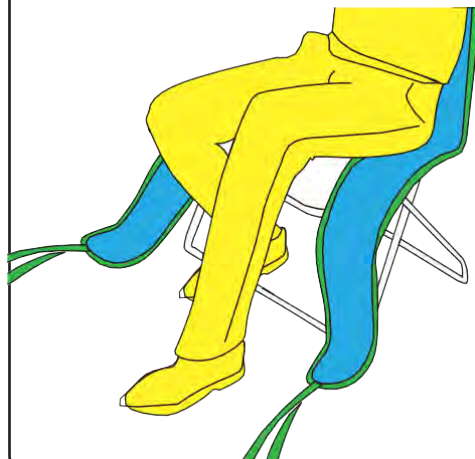


- 5** Carefully feed the legs of the sling underneath pushing the sling section down into the seating surface to avoid friction and shear against the clients legs.

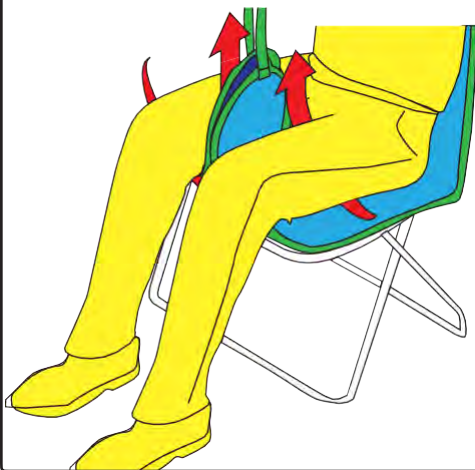


- 6** Ensure the leg sections are equal in length and no twists or kinks are present. Feed one leg strap through the other.

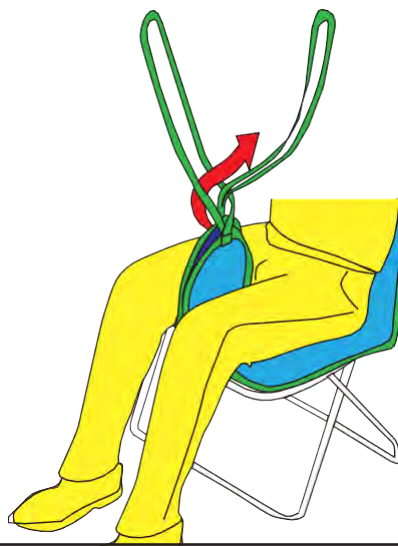

- 7** The loop selection of each strap should be in accordance to a moving handling plan written by a competent person. Lifting straps can contain differing quantities of loops, the loop closest to the body of the sling will always be identified as number 1.

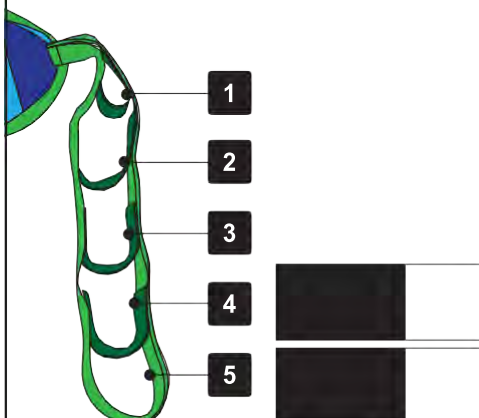

- 8** Attach straps to the spreader bar.

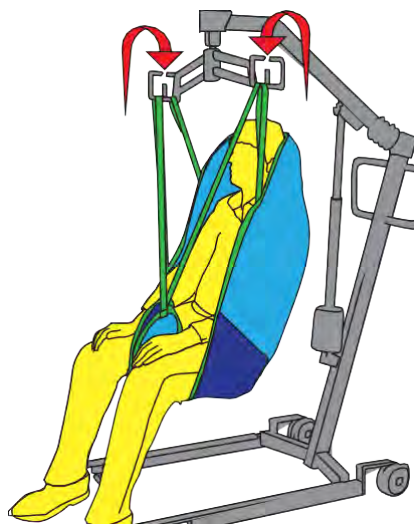

## EXAMINATION AND INSPECTION OF SLING

### CAUTION

Before every lift visually examine the slings structural integrity. If there is any sign of excessive damage to the fabric or straps DO NOT USE THE SLING.

### GENERAL EXTERNAL WEAR

In normal use this is unavoidable and is shown by fluffiness to the surface fibres. This may be caused by sharp edges on straps or hook and loop fastener. This is harmless unless it becomes too extensive. Normal material condition is smooth or flat.

### LOCAL ABRASION IN THE WEBBING STRAPS

This may be caused by the passage of the webbing over the sharp edges whilst under tension or hook and loop fastener. Slight damage to the outer fibres may be considered safe but in severe cases this should lead to instant rejection of the product.

### CUTS, HOLES OR BURNS

These are dangerous and must lead to instant rejection of the product.

### EXAMINATION OF STITCH PATTERNS

Examine the stitch patterns for broken, worn, pulled or unravelled stitches. Reject any product where the thread has become subject to excessive abrasion or broken stitches.



DO NOT USE



DO NOT USE

### WASHING INSTRUCTIONS

Each sling can be laundered up to 80°C using a mild soap solution and then rinse. Slings will air dry quickly in a warm room or in the normal manner.

Tumble dry on low setting only. Do not place over a convactor heater or steam pipes. Do not use Biological detergents. Do not use Bleach. Do not use strong chemicals. A faded label is an early indicator that sling is subject to harsh /abrasive cleaning methods do not continue to use sling. All slings fitted with a hook and loop fastener body belt should have the hook and loop fastener square removed during laundering and refitted afterwards. This will significantly extend the lifespan of the product.

### SAFE WORKING LOAD

Spacer - 300kg | Poly - 400kg

### SLING INSPECTION

Each product should be inspected prior to each use and with your six month or annual hoist inspection. This is in line with LOLER (Lifting Operations and Lifting Equipment Regulations)



Integrity Healthcare Ltd, Unit 47, Vale Business Park, Llandow Industrial Estate, Cowbridge, South Wales, CF71 7PF, UK  
t: 01446 612 238 | t: 0800 043 0050 | e: customerservices@integrity-healthcare.co.uk | www.integritymobilitysolutions.com

